



	Original	Recharge
	Display	Display / Media
	Search	Sleep / Timer
	Standby	+ Shift + Power
	Operate	Power
	1	1
	2	2
	3	3
	4	4
	5	5
	6	6
	7	7
	8	8
	9	9
	Mode	Picture / Format
	0/10	0
	>10	Guide / EPG / -/-
	Tune+	>> / Tune+

	Original	Recharge
	Mega Bass	Audio / Lang I/II
	Vol+	Vol+
	Tune-	<< / Tune-
	Sound	Sound / Title
	Vol-	Vol-
	Band	TV/Radio /
	I<<	I<< / Preset-
	>>I	>>I / Preset+
	Play	Play / Slow
	Pause	Pause / Step / Freeze
	Stop	Stop / Hold
	Stop Tape	OK
	< Tape	Left
	Tape >	Right
	Rec/Pause Tape	Rec / Rec Mode
	<< Tape	CH- / Page-
	Tape >>	CH+ / Page+

