






 

 

 

 

 

 

 


 
 

 





 



























 


 
 





Original	Rechange	Original	Rechange
	Mute		Mute / Dimmer
	[i+]		Info / Angle
	Power		Power
	Eject		Eject / Surround
	On Timer		Setup / OPT /
	[]		Audio / Lang I/II
	[=]		Text / Goto
	Input		AV / Input / RDS
	Sleep		Sleep / Timer
	Up		Up
	Menu		Menu / Home
	Back		Back / Return
	Down		Down
	OK		OK
	Show View		Smart / List
	1		1
	2		2
	3		3
	Timer On		Picture / Format
	4		4
	5		5
	6		6
	Timer REC/On/Off		Shift + Sleep / Timer
	7		7
	8		8
	9		9
	Timer REC/Clear		Zoom / Size
	-/--		Guide / EPG / -/--
	0		0
	C		Exit / Cancel / Clear
	Vol+		Vol+
	Progr+		CH+ / Page+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat





Original	Recharge	Original	Recharge
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Vol-		Vol-
	Porgr-		CH- / Page-
	REC		Rec / Rec Mode
	Quick Timer		Shift + Setup / OPT / Tools
	Tape Speed		Sound / Title
	Counter Reset		Subtitle / EQ
	Replay		Shift + Text /
	Pause		Pause / Step / Freeze
	Index Search I<<		I<< / Preset-
	Index Search >>I		>>I / Preset+
	<< REW		<< / Tune-
	Play		Play / Slow
	>> FF		>> / Tune+
	Stop		Stop / Hold

