 


 
 
 
 

 
 








Original	Rechange
 Power	 Power
 Muting	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 I<</Preset-	 I<< / Preset-
 >>I/Preset+	 >>I / Preset+
 Sound Mode	 Sound / Title
 Audio	 Audio / Lang I/II
 Subtitle/D.Tuning	 Subtitle / EQ
 Picture Navi	 Picture / Format
 S-Air Mode	 Zoom / Size
 Sleep	 Sleep / Timer
 Tv Input	 AV / Input / RDS
 System	 D.Menu / Top

Original	Rechange
 Display/Tools	 Setup / OPT /
 One -Touch Play	 Text / Goto
 Menu/DVD	 Menu / Home
 Theatre	 TV/Radio /
 Up	 Up
 Angle	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right
 Clear	 Exit / Cancel / Clear
 Down	 Down
 Return	 Back / Return
 Volume+	 Vol+
 Dynamic Bass	 Smart / List
 Function+	 CH+ / Page+
 Volume-	 Vol-
 Display	 Display / Media



 



Menu/Enter

Menu







Original		Rechange	
	Function-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Night		Red / Netflix / Search
	DVD Top Menu		Green / APP / Repeat
	Disc Skip		Blue / Prime Video / Random
	Power Tv		Shift + Power
	Tv Vol-		Shift + Vol-
	Tv Vol+		Shift + Vol+

Original		Rechange	
	→/ > Step/Advance		Shift + >> /
	←/ < Step/Replay		Shift + << /





Original	Recharge
 Power	 Power
 Tv Vol+	 Vol+
 Tv Input	 AV / Input / RDS
 Tv Vol-	 Vol-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Guide / EPG / -/--
 0	 0
 Enter	 Fav / Marker / PC
 Menu	 Menu / Home

Original	Recharge
 Muting	 Mute / Dimmer
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Tools	 Setup / OPT /
 Prog-	 CH- / Page-
 Prog+	 CH+ / Page+

