



Original	Rechange
Input	AV / Input / RDS
Wide	Picture / Format
Power	Power
Theater	TV/Radio /
<</<II/<I	<< / Tune-
Play	Play / Slow
I>/II>/>>	>> / Tune+
Sync Menu	Shift + Display / Media
I<<	I<< / Preset-
Stop	Stop / Hold
>>I	>>I / Preset+
i-Manual	Text / Goto
Scene	Shift + Fav / Marker / PC
Top Menu	D.Menu / Top
Menu BD/DVD	Shift + D.Menu / Top Menu
CC/Subtitle	Subtitle / EQ
Internet Widgets	Shift + Smart / List

Original	Rechange
Internet Video	Eject / Surround
Qriocity	Audio / Lang I/II
Favorites	Fav / Marker / PC
Guide	Guide / EPG / -/--
Up	Up
Display	Display / Media
Left	Left
OK	OK
Right	Right
Return	Back / Return
Down	Down
Options	Setup / OPT /
Home/Menu	Menu / Home
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Red	Red / Netflix / Search
Green	Green / APP / Repeat




 










Original	Rechange
1	TV 1
2	DVD 2
3	CD - STB 3
4	VIDEO 4
5	TAPE 5
6	TUNER 6
7	AUX - HDD 7
8	USB 8
9	BLUETOOTH 9
.	LIST SMART Smart / List
0	HDMI - BAT 0
ENT	CLEAR EXIT CANCEL Exit / Cancel / Clear
VOL +	VOL + Vol+
CH +	CH PAGE + CH+ / Page+
Muting	DIMMER MUTE Mute / Dimmer
Vol-	VOL - Vol-
CH-	CH PAGE - CH- / Page-

Original	Rechange
Jump	SIZE ZOOM Zoom / Size





Original	Rechange
 Input	 AV / Input / RDS
 Power	 Power
 <</< <	 << / Tune-
 Play	 Play / Slow
 >/ >/>>	 >> / Tune+
 <<	 << / Preset-
 Stop	 Stop / Hold
 >>	 >> / Preset+
 Top Menu	 D.Menu / Top
 Menu BD/DVD	 Picture / Format
 Favorites	 Fav / Marker / PC
 Guide	 Guide / EPG / -/--
 Up	 Up
 Display	 Display / Media
 Left	 Left
 OK	 OK
 Right	 Right

Original	Rechange
 Return	 Back / Return
 Down	 Down
 Options	 Setup / OPT /
 Home/Menu	 Menu / Home
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9





 

 



 


 
 


 


 





 

 








 


 









 

 





 
 


	Original	Rechange	Original	Rechange
	.	 Smart / List		
	0	 0		
	ENT	 Exit / Cancel / Clear		
	Vol+	 Vol+		
	CH+	 CH+ / Page+		
	Muting	 Mute / Dimmer		
	Vol-	 Vol-		
	CH-	 CH- / Page-		







 

 

 



 

 



 









 

 







 

 



 

 





 

 



Original	Rechange
 Input	 AV / Input / RDS
 Power	 Power
 Menu BD/DVD	 D.Menu / Top
 Favorites	 Fav / Marker / PC
 Guide	 Guide / EPG / -/--
 Up	 Up
 Display	 Display / Media
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Home/Menu	 Menu / Home
 1	 1
 2	 2
 3	 3
 4	 4

Original	Rechange
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 .	 Smart / List
 0	 0
 ENT	 Exit / Cancel / Clear
 Vol+	 Vol+
 CH+	 CH+ / Page+
 Muting	 Mute / Dimmer
 Vol-	 Vol-
 CH-	 CH- / Page-
 Jump	 Picture / Format





Original	Rechange
 Input	 AV / Input / RDS
 Power	 Power
 <</<I/<II	 << / Tune-
 II>/I/>>>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Menu BD/DVD	 D.Menu / Top
 Up	 Up
 Display	 Display / Media
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Home/Menu	 Menu / Home
 1	 1
 2	 2
 3	 3

Original	Rechange
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ENT	 Exit / Cancel / Clear
 Vol+	 Vol+
 Muting	 Mute / Dimmer
 Vol-	 Vol-

