



Original	Rechange
Input	AV / Input / RDS
Power	Power
Auto Sound	Sound / Title
Standard	Zoom / Size
Cinema	Picture / Format
Music	TV/Radio /
Voice	Display / Media
Night	Exit / Cancel / Clear
Vol+	Vol+
Vol-	Vol-
Indicator	Info / Angle
Mute	Mute / Dimmer
Play Mode	Red / Netflix / Search
Audio	Audio / Lang I/II
Up	Up
Enter	OK
Down	Down

Original	Rechange
Play	Play / Slow
Pause	Pause / Step / Freeze
I<<	I<< / Preset-
>>I	>>I / Preset+

