




 







Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Fav	 Fav / Marker / PC
 0	 0
 TXT	 Text / Goto
 F.List	 Smart / List
 Media	 Display / Media
 Recall	 Back / Return

Original	Rechange
 Guide	 Guide / EPG / -/--
 Vol+	 Vol+
 CH+ / Page+	 CH+ / Page+
 Info	 Info / Angle
 Vol-	 Vol-
 CH- / Page-	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear





	Original	Recharge	Original	Recharge
	TV/RAD			TV/Radio /
	Signal			Setup / OPT /
	<<			<< / Tune-
	Play			Play / Slow
	Stop			Stop / Hold
	>>			>> / Tune+
	Pause			Pause / Step / Freeze
	Rec			Rec / Rec Mode

