











Original	Rechange	Original	Rechange
 Power	 Power	 Yellow	 Yellow / YouTube / Repeat
 Source	 AV / Input / RDS	 Menu	 Menu / Home
 Picture	 Picture / Format	 0	 0
 Sound	 Sound / Title	 Exit	 Exit / Cancel / Clear
 Still	 Pause / Step / Freeze	 Blue	 Blue / Prime Video / Random
 Mute	 Mute / Dimmer	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 OK
 3	 3	 Right	 Right
 Red	 Red / Netflix / Search	 Down	 Down
 4	 4	 CH -	 CH- / Page-
 5	 5	 CH +	 CH+ / Page+
 6	 6	 Vol -	 Vol-
 Green	 Green / APP / Repeat	 Vol +	 Vol+
 7	 7	 Guide / Size	 Guide / EPG / -/--
 8	 8	 Index / Subtitle	 Subtitle / EQ
 9	 9	 Sleep	 Sleep / Timer

Original	Rechange	Original	Rechange
 Power	 DIMMER MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP - FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG VII	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 SIZE	 TIMER	 TV RADIO
 PICTURE	 ZOOM	 SLEEP	 RDS
 TOP MENU	 OPT-TOOLS	 GOTO	 AV INPUT
 D.MENU	 SETUP	 TEXT	 AV INPUT
 HOME	 ANGLE	 MENU	 INFO
 OK	 OK	 RETURN	 BACK
 EXIT	 CANCEL	 LIST	 SMART
 VOL+	 MEDIA	 CH PAGE +	 CH PAGE -
 TV	 DVD	 CD - STB	 CH PAGE -
 VIDEO	 TAPE	 TUNER	 CH PAGE +
 AUX - HDD	 USB	 BLUETOOTH	 CH PAGE -
 GUIDE EPG	 HDMI - BAT	 PC	 CH PAGE +
 NETFLIX	 APP	 YouTube	 FAV MARKER
 SEARCH	 REPEAT	 REPEAT A-B	 RANDOM
 www.mandis.tv			





Original	Recharge
 Text	 Text / Goto
 FAV / Sub Code	 Fav / Marker / PC
 TV / Reveal	 TV/Radio /
 Comp / Mix	 Display / Media
 Language	 Audio / Lang I/II
 Cancel	 Shift + Exit / Cancel / Clear
 Info	 Info / Angle
 Recall	 Back / Return
 Zoom	 Zoom / Size
 I / II	 Shift + Audio / Lang I/II

Original	Recharge

