

 




 












Original	Rechange	Original	Rechange
 Power	 Power	 Yellow	 Yellow / YouTube / Repeat
 Source	 AV / Input / RDS	 Menu	 Menu / Home
 Picture	 Picture / Format	 0	 0
 Sound	 Sound / Title	 Exit	 Exit / Cancel / Clear
 Still	 Pause / Step / Freeze	 Blue	 Blue / Prime Video / Random
 Mute	 Mute / Dimmer	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 OK
 3	 3	 Right	 Right
 Red	 Red / Netflix / Search	 Down	 Down
 4	 4	 CH -	 CH- / Page-
 5	 5	 CH +	 CH+ / Page+
 6	 6	 Vol -	 Vol-
 Green	 Green / APP / Repeat	 Vol +	 Vol+
 7	 7	 Guide / Size	 Guide / EPG / -/--
 8	 8	 Index / Subtitle	 Subtitle / EQ
 9	 9	 Sleep	 Sleep / Timer





Original		Rechange	
	Text		Text / Goto
	FAV / Sub Code		Fav / Marker / PC
	TV / Reveal		TV/Radio /
	Comp / Mix		Display / Media
	Language		Audio / Lang I/II
	Cancel		Shift + Exit / Cancel / Clear
	Info		Info / Angle
	Recall		Back / Return
	Zoom		Zoom / Size
	I / II		Shift + Audio / Lang I/II

Original		Rechange	

