









Original	Rechange	Original	Rechange
 Power	 Power	 Yellow	 Yellow / YouTube / Repeat
 Source	 AV / Input / RDS	 Menu	 Menu / Home
 Picture	 Picture / Format	 0	 0
 Sound	 Sound / Title	 Exit	 Exit / Cancel / Clear
 Still	 Pause / Step / Freeze	 Blue	 Blue / Prime Video / Random
 Mute	 Mute / Dimmer	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 OK
 3	 3	 Right	 Right
 Red	 Red / Netflix / Search	 Down	 Down
 4	 4	 CH -	 CH- / Page-
 5	 5	 CH +	 CH+ / Page+
 6	 6	 Vol -	 Vol-
 Green	 Green / APP / Repeat	 Vol +	 Vol+
 7	 7	 Guide / Size	 Guide / EPG / -/--
 8	 8	 Index / Subtitle	 Subtitle / EQ
 9	 9	 Sleep	 Sleep / Timer

Original	Rechange	Original	Rechange
 Power	 DIMMER MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP - FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG VUI	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 SIZE	 TIMER	 TV RADIO
 PICTURE	 ZOOM	 SLEEP	 RDS
 TOP MENU	 OPT-TOOLS	 GOTO	 AV INPUT
 D.MENU	 SETUP	 TEXT	 HOME
 MENU	 ANGLE	 INFO	
 OK	 OK	 RETURN	 BACK
 EXIT	 CANCEL	 LIST	 SMART
 VOL+	 MEDIA	 DISPLAY	 CH PAGE +
 VOL-	 TV	 DVD	 CD - STB
 1	 VIDEO	 TAPE	 TUNER
 2	 AUX - HDD	 USB	 BLUETOOTH
 3	 GUIDE EPG	 HDMI - BAT	 PC
 4	 NETFLIX	 APP	 YouTube
 5	 REPEAT	 REPEAT A-B	 RANDOM
 6			





	Original		Rechange
	Text		Text / Goto
	FAV / Sub Code		Fav / Marker / PC
	TV / Reveal		TV/Radio /
	Comp / Mix		Display / Media
	Language		Audio / Lang I/II
	Cancel		Shift + Exit / Cancel / Clear
	Info		Info / Angle
	Recall		Back / Return
	Zoom		Zoom / Size
	I / II		Shift + Audio / Lang I/II

	Original		Rechange

