



 

 

 



 

 











 



















 



 
 

 

 





 
 


| Original | Rechange |
|-----------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|
|  Power |  Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  Reset |  Guide / EPG / -/-- |
|  0 / AV PC |  0 |
|  RTN |  Back / Return |
|  Display |  Display / Media |
|  Up / P+ |  Up |
|  Up / P+ |  CH+ / Page+ |
|  Input |  AV / Input / RDS |

| Original | Rechange |
|----------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|
|  Left / V- |  Left |
|  Left / V- |  Vol- |
|  Menu / Enter |  Menu / Home |
|  Menu / Enter |  OK |
|  Right / V+ |  Right |
|  Right / V+ |  Vol+ |
|  ARC |  Info / Angle |
|  Down / P- |  Down |
|  Down / P- |  CH- / Page- |
|  Exit |  Exit / Cancel / Clear |
|  Text |  Text / Goto |
|  Text Subcode |  Subtitle / EQ |
|  PIP Up |  Shift + Up |
|  PIP Position |  Shift + Left |
|  PIP On/Off |  Shift + OK |
|  PIP Size |  Shift + Right |
| PIP Down | Shift + Down |





| Original | | Rechange | | Original | Rechange |
|-------------------------------------------------------------------------------------|----------------|-------------------------------------------------------------------------------------|-----------------------------|----------|----------|
|  | Text Reveal |  | Play / Slow | | |
|  | Text Index |  | Smart / List | | |
|  | Text Hold |  | Stop / Hold | | |
|  | Text Cancel |  | Rec / Rec Mode | | |
|  | Text Size |  | Zoom / Size | | |
|  | Green / MUP |  | Green / APP / Repeat | | |
|  | Yellow / Pause |  | Yellow / YouTube / Repeat | | |
|  | Yellow / Pause |  | Pause / Step / Freeze | | |
|  | Blue / Audio |  | Blue / Prime Video / Random | | |
|  | Blue / Audio |  | Audio / Lang I/II | | |
|  | Red / Picture |  | Red / Netflix / Search | | |
|  | Red / Picture |  | Setup / OPT / | | |
|  | Sleep |  | Sleep / Timer | | |
|  | Mute |  | Mute / Dimmer | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

