 






 
 
 



 

 



 



 

 












Original	Recharge
 Power	 Power
 Auto	 Smart
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 Recall	 Pre Ch
 Vol +	 Vol +
 Vol -	 Vol -

Original	Recharge
 Aspect	 Format
 Nicam	 Dual
 Display	 Info
 CH +	 Ch +
 CH -	 Ch -
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 Enter	 Ok
 Menu	 Menu
 Exit	 Exit
 Input	 AV
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Sleep	 Sleep
 Text	 Text





Original		Recharge		Original		Recharge	
	Hold		Pause				
	PGUP		Shift + Up				
	PGDW		Shift + Down				
	Index		Shift + Info				
	Size		Eject				
	Reveal		Media				
	Subpage		Subt				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Cyan		Blue				

