

 







 



 















 

 



 















 

 

 



 





 



 



 

 



 

 

 

 
 


 

 













Original	Rechange
 Standby	 Power
 Open/close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 Subtitle	 Subtitle / EQ
 4	 4
 5	 5
 6	 6
 Angle	 Shift + Info / Angle
 7	 7
 8	 8
 9	 9
 Language	 Audio / Lang I/II
 0	 0
 +10	 Guide / EPG / -/-
 Video	 Shift + 4

Original	Rechange
 Program	 TV/Radio /
 Mute	 Mute / Dimmer
 N/P	 AV / Input / RDS
 Time	 Sleep / Timer
 OSD	 Display / Media
 Setup	 Setup / OPT /
 Up	 Up
 Title	 Sound / Title
 Left	 Left
 Enter	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Return	 Back / Return
 USB/Card	 Smart / List
 Stop	 Stop / Hold
 Play	 Play / Slow





Original	Recharge
 Pause	 Pause / Step / Freeze
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 A-B	 Yellow / YouTube / Repeat
 Repeat	 Green / APP / Repeat
 L/R	 Red / Netflix / Search
 Slow	 Shift + Play /
 Vol+	 Vol+
 Echo+	 CH+ / Page+
 Mic Vol+	 Shift + CH+ /
 Mic	 Info / Angle
 Vol-	 Vol-
 Echo-	 CH- / Page-
 Mic Vol-	 Shift + CH- /
 Zoom	 Zoom / Size

Original	Recharge

