

 
 


 
 


 









 
 




 

 


 


 





 



 




 
 



 




	Original	Rechange	Original	Rechange
	Power			Ok
	Mute			Up
	1			Down
	2			Right
	3			Left
	4			Vol +
	5			Vol -
	6			Ch +
	7			Ch -
	8			Stop
	9			Play
	0			Rec
	Thumb			>>
	Time Shift			<<
	Menu			EPG/BG-Music
	Exit			Shift + Options
	Info			Text
				Eject





	Original	Recharge		Original	Recharge
	FAV	 +  Shift + Pre Ch			
	Goto	 OPT Options			
	Audio	 DUAL Dual			
	Subtitle	 SUBT Subt			
	16:9	 FORMAT Format			
	Repeat	 +  TEXT Shift + Text			
	I<<	 I<<			
	>>I	 >>I			
	Red	 A Red			
	Green	 B Green			
	Yellow	 C Yellow			
	Blue	 D Blue			

