


 



 
 
 
 
 

 
 

 



 



 
 
 
 


 


 




 

 




 
 

 

 










 

 





 
 

 








	Original	Rechange	Original	Rechange
	Power			Confirm
	Mute			Smart
	TV Sys			Guide
	Audio			Return
	SUB-T			Up
	Goto			Down
	1			Right
	2			Left
	3			Ok
	4			Vol +
	5			Vol -
	6			Info
	7			I<<
	8			>>I
	9			Play
	0			Pause
	Select			Stop
				Edit
				Exit





Original	Rechange
 <<	 <<
 >>	 >>
 ←	 CH -
 →	 CH +
 Slow	 AV
 Zoom	 Eject
 Repeat	 Text
 A-B	 3D
 Media	 Media
 Music	 Red
 Photo	 Green
 Setup	 Menu

Original	Rechange

