
 

 
 

 



 







 


 

 






 




| Original | | Rechange | | Original | | Rechange | |
|----------|--------|----------|--------|----------|----------|----------|----------------|
| | Power | | Power | | Display | | Info |
| | Mute | | Mute | | Sleep | | Sleep |
| | 1 | | 1 | | Vol+ | | Vol + |
| | 2 | | 2 | | Vol- | | Vol - |
| | 3 | | 3 | | CH+ | | Ch + |
| | 4 | | 4 | | CH- | | Ch - |
| | 5 | | 5 | | FAV/List | | Shift + Pre Ch |
| | 6 | | 6 | | Clock | | Shift + AV |
| | 7 | | 7 | | List | | List |
| | 8 | | 8 | | Tv/Radio | | TV/R |
| | 9 | | 9 | | Aspect | | Format |
| | 0 | | 0 | | Freeze | | Pause |
| | -/-- | | Guide | | Index | | Options |
| | Recall | | Pre Ch | | Cancel | | Back |
| | Menu | | Menu | | Subpage | | Subt |
| | Source | | AV | | Text | | Text |
| | Exit | | Exit | | Size | | Eject |





| | Original | Rechange | Original | Rechange |
|---|----------|--|----------|----------|
|  | Reveal |  Media | | |
|  | Hold |  Dual | | |
|  | Mix |  +  Shift + Media | | |
|  | Red |  Red | | |
|  | Green |  Green | | |
|  | Yellow |  Yellow | | |
|  | Cyan |  Blue | | |
|  | Nicam |  Smart | | |
|  | P.Mode |  +  Shift + Format | | |
|  | S.Mode |  +  Shift + Dual | | |
|  | OK |  Ok | | |
|  | Up |  Up | | |
|  | Down |  Down | | |
|  | Right |  Right | | |
|  | Left |  Left | | |
| | | | | |
| | | | | |
| | | | | |

