 

 



 





 
 
 
 
 
 

 
 

 



 
 
 

 

 
 
 

 
 
 

 



 
 

 
 



 

 



 













Original		Rechange		Original		Rechange	
	Power		Power		P+		Ch +
	Source		AV		P-		Ch -
	1		1		i		Info
	2		2		Menu		Menu
	3		3		Q.Menu		D. Menu
	4		4		Back		Back
	5		5		Exit		Exit
	6		6		Up		Up
	7		7		Down		Down
	8		8		Right		Right
	9		9		Left		Left
	0		0		OK		Ok
	TV		TV/R		World		Media
	Recall		Pre Ch		Music/Camera/Ph		Smart
	Vol+		Vol +		Guide		Guide
	Vol-		Vol -		*/O		Format
	Mute		Mute		*/Q		3D





Original	Recharge	Original	Recharge
[≡]/Text	Text		
Red	Red		
Green	Green		
Yellow	Yellow		
Blue	Blue		
Lang	Dual		
[≡]..	Subt		
-[O]-	Options		
<<	<<		
Pause	Pause		
>>	>>		
Rec	Rec		
Play	Play		
Stop	Stop		

