



 



 



 

 

 



 

 



















 



 

 







 















Original	Rechange
 Power	 Power
 Home	 Shift + Menu /
 Audio	 Audio / Lang I/II
 Sleep	 Sleep / Timer
 Subtl	 Subtitle / EQ
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 DTV/Radio	 TV/Radio /
 0	 0
 Recall	 Back / Return

Original	Rechange
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 Vol-	 Vol-
 Mano/Mouse	 Smart / List
 P-	 CH- / Page-
 Info	 Info / Angle
 Up	 Up
 Entrada	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Salir	 Exit / Cancel / Clear
 Imagen	 Picture / Format
 Sonido	 Sound / Title





	Original	Rechange
TAMAÑO	Tamaño	SIZE ZOOM Zoom / Size
GUIA	Guía	GUIDE EPG Guide / EPG / -/--
TS	Play	SLOW Play / Slow
TS	Pause/TS	STEP - FREEZE Pause / Step / Freeze
DETENER	Detener	HOLD Stop / Hold
GRABAR	Grabar	REC MODE Rec / Rec Mode
TXT	TXT	GOTO TEXT Text / Goto
Red	I<<	PRESET- I<< / Preset-
Red	Red	NETFLIX SEARCH Red / Netflix / Search
Green	>>I	PRESET+ >>I / Preset+
Green	Green	APP REPEAT Green / APP / Repeat
Yellow	<<	TUNE- << / Tune-
Yellow	Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat
Blue	>>	TUNE+ >> / Tune+
Blue	Blue	Prime Video RANDOM Blue / Prime Video / Random

Original	Rechange

