

 

 


 
 

 


 


 
 



 

 



 
 


 

 
 
 
 
 
 

 
 


 


 



 

 







Original	Rechange	Original	Rechange
 Power	 Power	 Lang / NICAM	 Dual
 Mute	 Mute	 Input	 AV
 1	 1	 CH +	 Ch +
 2	 2	 CH -	 Ch -
 3	 3	 Up	 Up
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Left	 Left
 7	 7	 Enter	 Ok
 8	 8	 Menu	 Menu
 9	 9	 Exit	 Exit
 0	 0	 Display	 Info
 List	 List	 P.Mode	 Shift + Format
 Previous Channel	 Back	 S.Mode	 Shift + Dual
 Vol +	 Vol +	 Sleep	 Sleep
 Vol -	 Vol -	 FAV	 Pre Ch
 Aspect	 Format	 FAV -	 Shift + Ch -





	Original	Recharge		Original	Recharge
	FAV +	 +  Shift + Ch +		Yellow	 Yellow
	EPG	 Guide		Blue	 Blue
	Text	 Text			
	Hold	 3D			
	TV / Radio	 TV/R			
	Subtitle	 Subt			
	Index / <<	 <<			
	Size / >>	 >>			
	Reveal / I<<	 I<<			
	Subpage / >>I	 >>I			
	Rec	 Rec			
	Play / Pause	 Play			
	Play / Pause	 Pause			
	Stop	 Stop			
	Media	 Media			
	Red	 Red			
	Green	 Green			

