








 
 


 
 
 
 




 
 
 

 
 
 

 

 












 



 


 



 

 


 





Original		Rechange		Original		Rechange	
	Power		Power		Lang / Nicam		Dual
	Mute		Mute		Input		AV
	1		1		CH +		Ch +
	2		2		CH -		Ch -
	3		3		Up		Up
	4		4		Right		Right
	5		5		Down		Down
	6		6		Left		Left
	7		7		Enter		Ok
	8		8		Menu		Menu
	9		9		Exit		Exit
	0		0		Display		Info
	List		List		P.Mode		Shift + Format
	Recall		Back		S.Mode		Shift + Dual
	Vol +		Vol +		Sleep		Sleep
	Vol -		Vol -		FAV		Pre Ch
	Aspect		Format		Fav -		Shift + Down





Original		Recharge		Original		Recharge	
	Fav +	 + 	Shift + Up		Yellow		Yellow
	EPG		Guide		Blue		Blue
	Text		Text				
	Hold	 + 	Shift + Stop				
	TV / Radio		TV/R				
	Subtitle		Subt				
	Index / <<		<<				
	Size / >>		>>				
	Reveal / I<<		I<<				
	Subpage / >>I		>>I				
	Rec		Rec				
	Play / Pause		Play				
	Play / Pause		Pause				
	Stop		Stop				
	Media		Media				
	Red		Red				
	Green		Green				

