

 


 
 
 

 


 
 









 
 
 





 


 
 

 
 
 
 

 

 
 

 
 

 



Original	Recharge	Original	Recharge
On/Off	 Power	Text	 Text
Mute	 Mute	Menu Down	 Down
Update	 +  Shift + Options	Back	 Back
Subt.List	 Subt	Menu	 Menu
Reveal	 Options	Volume+	 Vol +
Menu Up	 Up	Display	 +  Shift + Info
Txt Stop	 Stop	Chan.Up	 Ch +
Menu Left	 Left	Volume-	 Vol -
Info	 Info	Chan.Down	 Ch -
OK Enter	 Ok	1	 1
Sleep Timer	 Sleep	2	 2
Return TV	 TV/R	3	 3
Menu video	 Format	4	 4
Txt Expand	 Eject	5	 5
TV/AV	 AV	6	 6
Menu Right	 Right	7	 7
Menu Off	 Exit	Menu audio	 Dual



Original	Recharge	Original	Recharge
8	 8		
9	 9		
Guide -/-- 1.	 GUIDE		
0/10	 0		
2.Fav P/C 2.	 PRE-CH		
Red	 A		
Green	 B		
Yellow	 C		
Blue	 D		
Disp	 SMART		
Color- S.Std	 MEDIA		
Audio+	 D.MENU		
Color+ P.Std	 3D		
Bright+ Mode	 SHIFT +  3D		
Off/Tim	 LIST		

