












 
 

 










Original	Rechange
Power	Power
Open / Close	Eject / Surround
OSD	Display / Media
1	1
2	2
3	3
Subtitle	Subtitle / EQ
4	4
5	5
6	6
Angle	Info / Angle
7	7
8	8
9	9
Language	Audio / Lang I/II
R/L	Blue / Prime Video / Random
0	0

Original	Rechange
10+	Guide / EPG / -/--
Setup	Setup / OPT /
Mute	Mute / Dimmer
Clear	Exit / Cancel / Clear
Prog	TV/Radio /
Time	Sleep / Timer
Up	Up
Left	Left
Enter	OK
Right	Right
Down	Down
Title	Sound / Title
Menu	Menu / Home
Default	AV / Input / RDS
<<	<< / Tune-
Play / Pause	Play / Slow
Play / Pause	Pause / Step / Freeze









































































Original	Rechange
 I<<	 I<< / Preset-
 >>	 >> / Tune+
 Stop	 Stop / Hold
 >>	 >> / Preset+
 N/F	 Red / Netflix / Search
 Repeat	 Green / APP / Repeat
 A-B	 Yellow / YouTube / Repeat
 zoom	 Zoom / Size
 Mode	 D.Menu / Top
 Step	 Shift + Pause / Step /
 Slow	 Shift + Play /
 Vol+	 Vol+
 Resume	 Smart / List
 PBC	 Picture / Format
 Return	 Back / Return
 Vol-	 Vol-

Original	Rechange

















 






Original	Rechange	Original	Rechange
On/Off	 Power	Progr.	 TV/Radio /
Audio Off	 Mute / Dimmer	Top Menu	 D.Menu / Top
Play	 Play / Slow	Setup	 Setup / OPT /
Pause	 Pause / Step / Freeze	C/CH	 Text / Goto
Stop	 Stop / Hold	DVD/TV	 AV / Input / RDS
Record	 Rec / Rec Mode	Menu	 Menu / Home
Rewind	 << / Tune-	Menu Up	 Up
F.Forward	 >> / Tune+	Angle	 Info / Angle
Prev.	 I<< / Preset-	Menu Left	 Left
Next	 >>I / Preset+	OK Enter	 OK
Title	 Sound / Title	Menu Right	 Right
Audio	 Audio / Lang I/II	Pbc	 Exit / Cancel / Clear
Subt.	 Subtitle / EQ	Menu Down	 Down
Open/Close	 Eject / Surround	Return	 Back / Return
Auto/Track	 Picture / Format	Volume+	 Vol+
Zoom	 Zoom / Size	Resume	 Smart / List
Np	 Sleep / Timer	Slow Up	 CH+ / Page+

Original	Rechange	Original	Rechange
On/Off	 Power	Progr.	 TV/Radio /
Audio Off	 Mute / Dimmer	Top Menu	 D.Menu / Top
Play	 Play / Slow	Setup	 Setup / OPT /
Pause	 Pause / Step / Freeze	C/CH	 Text / Goto
Stop	 Stop / Hold	DVD/TV	 AV / Input / RDS
Record	 Rec / Rec Mode	Menu	 Menu / Home
Rewind	 << / Tune-	Menu Up	 Up
F.Forward	 >> / Tune+	Angle	 Info / Angle
Prev.	 I<< / Preset-	Menu Left	 Left
Next	 >>I / Preset+	OK Enter	 OK
Title	 Sound / Title	Menu Right	 Right
Audio	 Audio / Lang I/II	Pbc	 Exit / Cancel / Clear
Subt.	 Subtitle / EQ	Menu Down	 Down
Open/Close	 Eject / Surround	Return	 Back / Return
Auto/Track	 Picture / Format	Volume+	 Vol+
Zoom	 Zoom / Size	Resume	 Smart / List
Np	 Sleep / Timer	Slow Up	 CH+ / Page+























Original	Rechange	Original	Rechange
Volume-	 Vol-		
Display	 Display / Media		
Slow Down	 CH- / Page-		
1	 1		
2	 2		
3	 3		
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
+10	 Guide / EPG / -/--		
0	 0		
R/L	 Fav / Marker / PC		
Search	 Red / Netflix / Search		
Repeat/1/All	 Green / APP / Repeat		

Original	Rechange	Original	Rechange
Rep/A-B	 Yellow / YouTube / Repeat		
Shuffle	 Blue / Prime Video / Random		
Karaoke/Step	 Shift + Pause / Step /		
Echo+	 Shift + Up		
Echo-	 Shift + Down		
3D	 Shift + 3		
Video	 Shift + 4		





















 


Original	Rechange
On/Off	 Power
Audio Off	 Mute / Dimmer
Play	 Play / Slow
Pause	 Pause / Step / Freeze
Stop	 Stop / Hold
Record	 Rec / Rec Mode
Rewind	 << / Tune-
F.Forward	 >> / Tune+
Prev.	 I<< / Preset-
Next	 >>I / Preset+
Title	 Sound / Title
Lang	 Audio / Lang I/II
Subt.	 Subtitle / EQ
Open/Close	 Eject / Surround
Auto/Track	 Picture / Format
Zoom	 Zoom / Size
Pbc	 Sleep / Timer

Original	Rechange
Progr.	 TV/Radio /
Top Menu	 D.Menu / Top
Setup	 Setup / OPT /
Resume	 Text / Goto
DVD/TV	 AV / Input / RDS
Menu	 Menu / Home
Menu Up	 Up
Angle	 Info / Angle
Menu Left	 Left
OK Enter	 OK
Menu Right	 Right
Clear/00:00	 Exit / Cancel / Clear
Menu Down	 Down
Return	 Back / Return
Volume+	 Vol+
Mode	 Smart / List
Slow Up	 CH+ / Page+





Original	Recharge	Original	Recharge
Volume-	 Vol-	Rep/A-B	 Yellow / YouTube / Repeat
Display	 Display / Media	R/L	 Blue / Prime Video / Random
Slow Down	 CH- / Page-		
1	 1		
2	 2		
3	 3		
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
+10	 Guide / EPG / -/--		
0	 0		
C/CH	 Fav / Marker / PC		
Np	 Red / Netflix / Search		
Repeat/1/All	 Green / APP / Repeat		

