

 




 

 
 



 


 



 



 






 















 
 





 










Original		Rechange		Original		Rechange	
	Power		Power		P+		CH+ / Page+
	Mute		Mute / Dimmer		Vol-		Vol-
	1		1		P-		CH- / Page-
	2		2		Up		Up
	3		3		Left		Left
	4		4		OK		OK
	5		5		Right		Right
	6		6		LCD Menu		Shift + D.Menu / Top Menu
	7		7		Down		Down
	8		8		DVB Menu		D.Menu / Top
	9		9		Input		AV / Input / RDS
	-/--		Guide / EPG / -/--		P.Mode		Picture / Format
	0		0		S.Mode		Sound / Title
	Recall		Back / Return		Sleep		Sleep / Timer
	Vol+		Vol+		Info/Display		Info / Angle
	Audio/Audio/Lang/MTS		Audio / Lang I/II		Zoom/P.Ratio		Zoom / Size
	Exit/Exit		Exit / Cancel / Clear		Tv/Radio		TV/Radio /





Original	Recharge
FAV	Fav / Marker / PC
TTX	Text / Goto
Pause/Hold/Pause	Pause / Step / Freeze
Cancel/USB/Card	+  Shift + Exit / Cancel / Clear
EPG/List	+  Shift + Guide / EPG / -/-
Stop/Index/Stop	Stop / Hold
Size	+  Shift + Zoom /
Play/Play	Play / Slow
Reveal/Reveal	Setup / OPT /
Subtitle/Sub.PG	Subtitle / EQ
<</FR	<< / Tune-
Red	Red / Netflix / Search
>>/FF	>> / Tune+
Green	Green / APP / Repeat
I<</Prev	I<< / Preset-
Yellow	Yellow / YouTube / Repeat
>>I/Next	>>I / Preset+

Original	Recharge
Blue	Blue / Prime Video / Random

