



Original		Rechange		Original		Rechange	
	Power		Power		Left		Left
	DTV/VCR		Smart		Rec List		List
	Mute		Mute		Favorite		Pre Ch
	Menu		Menu		Game		Media
	Info		Info		Recall		Back
	EPG		Guide		1		1
	Play		Play		2		2
	Pause		Pause		3		3
	Exit		Exit		4		4
	OK		Ok		5		5
	Up		Up		6		6
	CH+		Ch +		7		7
	CH-		Ch -		8		8
	Down		Down		9		9
	Right		Right		0		0
	Vol+		Vol +		Tv/Radio		TV/R
	Vol-		Vol -		Audio		Dual





Original		Rechange		Original		Rechange	
	Subtitle		Subt				
	Text		Text				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Record		Rec				
	Stop		Stop				
	<<		<<				
	>>		>>				

