 



 

 

 







 

 



 

 











 


 



 




















 

 

 

 

Original	Rechange
 Power	 Power
 3D	 Shift + 3
 TV	 Shift + 1
 TV	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Eco	 Display / Media
 0	 0
 Source	 AV / Input / RDS
 Vol+	 Vol+

Original	Rechange
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 Vol-	 Vol-
 P-	 CH- / Page-
 Info	 Info / Angle
 Option	 Setup / OPT /
 Smart Tv	 Smart / List
 Guide	 Guide / EPG / -/-
 Menu	 Menu / Home
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Zoom-	 Shift + Down





Original	Recharge
 Zoom+	 Shift + Up
 @/Home	 D.Menu / Top
 Sleep	 Sleep / Timer
 Pre-CH	 Shift + Back / Return
 FAV	 Fav / Marker / PC
 List	 Shift + Smart / List
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 OO/Lang	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Text	 Text / Goto
 I<	 I<< / Preset-
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze

Original	Recharge
 >	 >>  / Preset+
 <<	 << / Tune-
 Rec	 Rec / Rec Mode
 >>	 >> / Tune+

