 


 


 
















 
 
 
 











Original	Rechange
 Power	 Power
 Netflix	 Media
 TV	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Eco	 3D
 Source	 AV
 Vol+	 Vol +
 Vol-	 Vol -

Original	Rechange
 Mute	 Mute
 P+	 Ch +
 P-	 Ch -
 Info	 Info
 Option	 Options
 Smart TV	 Smart
 Guide	 Guide
 Menu	 Menu
 Back	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Exit	 Exit
 Zoom+	 Shift + Ch +
 Zoom-	 Shift + Ch -





Original		Rechange	
	List		List
	Sleep		Sleep
	PRE-CH		Pre Ch
	FAV		Shift + Pre Ch
	Rec		Rec
	I<		I<<
	Stop		Stop
	Play		Play
>I button"/>	>I		>>I
<< button"/>	<<		<<
	Pause		Pause
>> button"/>	>>		>>
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Lang		Dual

Original		Rechange	
	Subtitle		Subt
	Text		Text

