








 

 






 







 





 

 











 






 






 





Original	Recharge	Original	Recharge
 Night	 Sleep / Timer	 Pause	 Pause / Step / Freeze
 Power	 Power	 OK	 OK
 Surr	 Subtitle / EQ	 Right	 Right
 OPT	 Setup / OPT /	 Down	 Down
 HDMI In	 Display / Media	 Bass-	 Vol-
 HDMI ARC	 0	 Mute	 Mute / Dimmer
 USB	 8	 Bass+	 Vol+
 AUX	 7		
 Bluetooth/Pairing	 9		
 Movie	 Picture / Format		
 Music	 Audio / Lang I/II		
 TV	 TV/Radio /		
 Treble-	 CH- / Page-		
 Treble+	 CH+ / Page+		
 Up	 Up		
 Left	 Left		
 Play	 Play / Slow		

Original	Recharge	Original	Recharge
 Pause	 Pause / Step / Freeze	 OK	 OK
 Right	 Right	 Down	 Down
 Bass-	 Vol-	 Mute	 Mute / Dimmer
 Bass+	 Vol+		

