 

 

 
 

 
 
 
 


 

 
 
 
 

 
 
 
 
 
 










 
 
 






 
 



 



 
 
 
 
 
 

 


 

 
 

 
 
 






Original	Recharge	Original	Recharge
	Power		Power
	Inicio		Options
	Filtro		Media
	Idioma		Dual
	Info		Info
	VOD		Smart
	TDT		TV/R
	Volver		Back
	Guia		Guide
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	PR+		Ch +
	PR-		Ch -
	Mute		Mute
	Zoom		Eject
	<<		<<
	>>		>>
	Play		Play
	Stop		Stop
	Pause		Pause
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9





Original	Recharge	Original	Recharge
 0	 0		
 FAV	 Pre Ch		
 Ajustes	 Menu		

