



Original	Recharge
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Mute	Mute / Dimmer
0	0
16:9	Picture / Format
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

Original	Recharge
TV	Shift + 1
Up / P+	Shift + Up
Up / P+	Up
AV	AV / Input / RDS
Left / V-	Left
Left / V-	Shift + Left
Menu	Menu / Home
Menu	Shift + Menu /
Right / V+	Right
Right / V+	Shift + Right
S / M / D	Exit / Cancel / Clear
Down / P-	Shift + Down
Down / P-	Down
Recall	Back / Return
Recall	Shift + Back / Return
i	Info / Angle
EQ	Subtitle / EQ





Original		Recharge	
	=i		Shift + Info / Angle
	PP		Sound / Title
	=		Text / Goto
	=/≡		Setup / OPT /
	Hold		Stop / Hold
	Size		Zoom / Size
	=X		Sleep / Timer
	=?		D.Menu / Top

Original	Recharge

