


 
 
 



 


 
 





 



 



 

 



 

 







 



 







 





 



 






Original	Rechange	Original	Rechange
 Power	 Power	 Top Menu	 D. Menu
 Sleep	 Sleep	 Menu	 Menu
 Clock / Timer	 AV	 Up	 Up
 Cancel	 Exit	 Left	 Left
 1	 1	 Enter	 Ok
 2	 2	 Right	 Right
 3	 3	 Down	 Down
 4	 4	 Setup	 Options
 5	 5	 Display	 Info
 6	 6	 Angle	 Format
 7	 7	 Return	 Back
 8	 8	 DVD/CD	 Red
 9	 9	 TAPE	 Green
 0	 0	 EXT	 Yellow
 >≧10 / -/-	 Guide	 TUNER	 Blue
 Subtitle	 Subt	 Stop	 Stop
 Audio	 Dual	 Pause / Rev. Play	 Pause





Original	Recharge
Play	Play
Auto / Mono	3D
I<< Skip	I<<
Skip >>I	>>I
<< Slow/Search	<<
Slow/Search >>	>>
Muting	Mute
Repeat	Text
A-B Repeat	Shift + Text
Play Mode	Rec
Volume-	Vol -
Volume+	Vol +
Balance L	Ch -
Balance L	Shift + Left
Balance R	Ch +
Balance R	Shift + Right

Original	Recharge

