



Original	Recharge	Original	Recharge
Standby	Shift + Mute / Dimmer	Info	Info / Angle
Mute	Mute / Dimmer	Left	Left
ATV	Shift + AV / Input / RDS	OK	OK
TV / Radio	TV/Radio /	Right	Right
TV Guide	Guide / EPG / -/--	Menu	Menu / Home
USB	Shift + 8	Down	Down
S. Mode	Sound / Title	Exit	Exit / Cancel / Clear
USB I<<<	I<<< / Preset-	1	1
USB >>>I	>>>I / Preset+	2	2
USB Stop	Stop / Hold	3	3
P. Mode	Picture / Format	4	4
USB <<<	<<< / Tune-	5	5
USB >>>	>>> / Tune+	6	6
USB Play/Pause	Shift + Play /	7	7
USB Play/Pause	Play / Slow	8	8
AV Source	AV / Input / RDS	9	9
Up	Up	0	0





Original	Recharge
	Back / Return
	Fav / Marker / PC
	Vol+
	Subtitle / EQ
	Shift + Picture / Format
	CH+ / Page+
	Vol-
	Audio / Lang I/II
	Sleep / Timer
	CH- / Page-
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Text / Goto
	Eject / Surround
	Shift + Back / Return

Original	Recharge
	Power
	Shift + Power
	Zoom / Size
	Shift + Stop /
	Shift + 3

