
 




 


 


 






 

 
 
 
 

 

 
 

 



 


 
 



 













 
 



 


 




Original	Rechange	Original	Rechange
PWR On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Epg	 Play	Exit	 Exit
Opt?	 Pause	Menu Down	 Down
App	 Stop	Back	 Back
Info	 Rec	Volume+	 Vol +
Subt.List	 Subt	CH/Page+	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
TV	 TV/R	Audio	 Media
Video	 D. Menu	CH/Page-	 Ch -
Text	 Text	1. ?	 1
Zoom	 Eject	2abc	 2
TV/SAT	 AV	3def	 3
Menu	 Menu	4ghi	 4
Menu Up	 Up	5jkl	 5
Display	 Info	6mno	 6
Menu Left	 Left	7pqrm	 7


 






Original	Recharge	Original	Recharge
8tuv	 8	H/V Play	 +  Shift + Yellow
9wxyz	 9	LNB F.Forward	 +  Shift + Blue
Guide Pilote	 Guide		
0/10	 0		
FAV Pref.	 Pre Ch		
Red	 Red		
Green	 Green		
Yellow	 Yellow		
Blue	 Blue		
On/Off	 +  Shift + Power		
West	 +  Shift + Play		
Dev	 +  Shift + Pause		
Freeze	 +  Shift + Stop		
SAT Sky	 +  Shift + AV		
Home Cinema	 +  Shift + Media		
East	 +  Shift + Red		
Lang./Rewind	 +  Shift + Green		



Original	Rechange	Original	Rechange
PWR On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Epg	 Play	Exit	 Exit
Opt?	 Pause	Menu Down	 Down
App	 Stop	Back	 Back
Info	 Rec	Volume+	 Vol +
Subt.List	 Subt	CH/Page+	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
TV	 TV/R	Audio	 Media
Video	 D. Menu	CH/Page-	 Ch -
Text	 Text	1. ?	 1
Zoom	 Eject	2abc	 2
TV/SAT	 AV	3def	 3
Menu	 Menu	4ghi	 4
Menu Up	 Up	5jkl	 5
Display	 Info	6mno	 6
Menu Left	 Left	7pqrm	 7



Original	Recharge	Original	Recharge
8tuv	 8		
9wxyz	 9		
Guide Pilote	 Guide		
0/10	 0		
FAV Pref.	 Pre Ch		
Red	 Red		
Green	 Green		
Yellow	 Yellow		
Blue	 Blue		
SAT Sky	 +  Shift + AV		

