



Original	Recharge
Mute	Mute / Dimmer
Power	Power
AV / S / SCART	AV / Input / RDS
HDTV / PC / HDMI	Shift + Fav / Marker / PC
TV / DTV	TV/Radio /
Index / Select	OK
Guide / Sub Page	Shift + Guide / EPG / -/-
Teletext / Exit	Exit / Cancel / Clear
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Up	Up
Left	Left
Menu	Menu / Home
Right	Right
Down	Down

Original	Recharge
1	1
2	2
3	3
CH+	CH+ / Page+
4	4
5	5
6	6
CH-	CH- / Page-
7	7
8	8
9	9
Vol+	Vol+
-/-	Guide / EPG / -/-
0	0
Return	Back / Return
Vol-	Vol-
Surround	Eject / Surround



