

 

 





 



 







 

 

 

 









 
 


 









 


 




 











Original	Rechange	Original	Rechange
 Power	 Power	 Vol-	 Vol-
 Source	 AV / Input / RDS	 i/Info	 Info / Angle
 1	 1	 PR-	 CH- / Page-
 2	 2	 Menu	 Menu / Home
 3	 3	 Up	 Up
 4	 4	 Q.Menu	 D.Menu / Top
 5	 5	 Left	 Left
 6	 6	 OK	 OK
 7	 7	 Right	 Right
 8	 8	 Back	 Back / Return
 9	 9	 Down	 Down
 TV	 TV/Radio /	 Exit	 Exit / Cancel / Clear
 0	 0	 World	 Smart / List
 Recall	 Fav / Marker / PC	 Music Photo	 Display / Media
 Vol+	 Vol+	 Guide	 Guide / EPG / -/--
 Mute	 Mute / Dimmer	 */o	 Setup / OPT /
 PR+	 CH+ / Page+	 */o..	 Zoom / Size





Original	Recharge	Original	Recharge
 ≡/Text	 Text / Goto		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Lang	 Audio / Lang I/II		
 [≡]..	 Subtitle / EQ		
 [-O-]	 Picture / Format		
 <<	 << / Tune-		
 Pause	 Pause / Step / Freeze		
 >>	 >> / Tune+		
 Rec	 Rec / Rec Mode		
 Play	 Play / Slow		
 Stop	 Stop / Hold		

