















 

 



 

 













 

 

 

 



 





Original	Recharge
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 >>	 >> / Tune+
 Lang	 Audio / Lang I/II
 [≡]..	 Subtitle / EQ
 Text	 Text / Goto
 Source	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 i	 Info / Angle
 Left	 Left
 OK	 OK

Original	Recharge
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 ←	 Back / Return
 V+	 Vol+
 Smart	 Smart / List
 P+	 CH+ / Page+
 V-	 Vol-
 P-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8





Original		Recharge		Original		Recharge	
	9		9				
	Guide		Guide / EPG / -/--				
	0		0				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	Home		Shift + Menu /				
	Netflix		Shift + Red / Netflix /				
	YouTube		Shift + Yellow / YouTube /				

