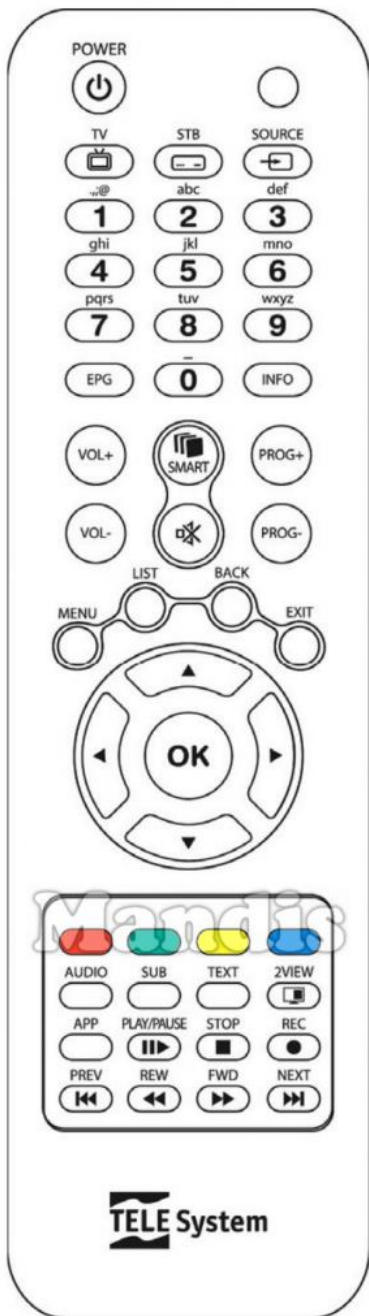

 


Original		Rechange		Original		Rechange	
	Power		Power		Prog+		Ch +
	1		1		Prog-		Ch -
	2		2		Menu		Menu
	3		3		List		List
	4		4		Back		Back
	5		5		Exit		Exit
	6		6		Up		Up
	7		7		Left		Left
	8		8		OK		Ok
	9		9		Right		Right
	0		0		Down		Down
	EPG		Guide		Red		Red
	Info		Info		Green		Green
	Vol+		Vol +		Yellow		Yellow
	Vol-		Vol -		Blue		Blue
	Smart		Smart		Audio		Dual
	Mute		Mute		Sub		Subt





Original		Recharge		Original		Recharge	
	Text		Text				
	2View		TV/R				
	APP		Media				
	Play / Pause		Play				
	Play / Pause		Pause				
	Stop		Stop				
	Rec		Rec				
	I << PREV		I <<				
	>> I NEXT		>> I				
	<< REW		<<				
	>> FWD		>>				

