

 




 









 


 

 

 



 
 

 





 

 

 






 



 

 
 
 
 
 
 

 
 
 

 



 



 


 




 




Original	Recharge	Original	Recharge
 Power	 Power	 Lista	 Shift + Ok
 Stop	 Stop	 Info	 Info
 Play/Pause	 Pause	 Vol+	 Vol +
 Play/Pause	 Play	 Vol-	 Vol -
 Rec	 Rec	 P+	 Ch +
 Next	 >>	 P-	 Ch -
 FWD	 >>	 Up	 Up
 REW	 <<	 Left	 Left
 Prev	 <<	 OK	 Ok
 File	 List	 Right	 Right
 Mute	 Mute	 Down	 Down
 AV	 AV	 Back	 Back
 TV / Rad	 TV/R	 Exit	 Exit
 Audio	 Dual	 Red	 Red
 SUB	 Subt	 Green	 Green
 APP	 Media	 Yellow	 Yellow
 Guida	 Guide	 Blue	 Blue





Original		Rechange		Original		Rechange	
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Menu		Menu				
	TXT		Text				

