



Original	Rechange
	Power
	TV/Radio /
	D.Menu / Top
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Info / Angle
	Guide / EPG / -/--
	Vol+
	Vol-

Original	Rechange
	Mute / Dimmer
	CH+ / Page+
	CH- / Page-
	Menu / Home
	Exit / Cancel / Clear
	Up
	Down
	Right
	Left
	OK
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Text / Goto
	Stop / Hold
	Play / Slow





Original	Recharge
 Pause	 Pause / Step / Freeze
 Rec	 Rec / Rec Mode
 I<<	 I<< / Preset-
 <<	 << / Tune-
 >>	 >> / Tune+
 >>I	 >>I / Preset+

Original	Recharge

