



Original		Rechange		Original		Rechange	
	Power		Power		Mute		Mute / Dimmer
	3D		Shift + 3		P+		CH+ / Page+
	TV		Shift + 1		Vol-		Vol-
	TV		TV/Radio /		P-		CH- / Page-
	1		1		Info		Info / Angle
	2		2		Option		Setup / OPT /
	3		3		Smart Tv		Smart / List
	4		4		Guide		Guide / EPG / -/-
	5		5		Menu		Menu / Home
	6		6		Up		Up
	7		7		Left		Left
	8		8		OK		OK
	9		9		Right		Right
	Eco		Display / Media		Back		Back / Return
	0		0		Down		Down
	Source		AV / Input / RDS		Exit		Exit / Cancel / Clear
	Vol+		Vol+		Zoom-		Shift + Down





Original	Recharge
Zoom+	Shift + Up
@/Home	D.Menu / Top
Sleep	Sleep / Timer
Pre-CH	Shift + Back / Return
FAV	Fav / Marker / PC
List	Shift + Smart / List
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
OO/Lang	Audio / Lang I/II
Subtitle	Subtitle / EQ
Text	Text / Goto
I<	I<< / Preset-
Stop	Stop / Hold
Play	Play / Slow
Pause	Pause / Step / Freeze

Original	Recharge
>I	>>I / Preset+
<<	<< / Tune-
Rec	Rec / Rec Mode
>>	>> / Tune+

