



Original	Rechange	Original	Rechange
	Power		Yellow
	Vol+		Info
	PR+		Blue/[]
	Vol-		1
	Mute		2
	Back		3
	PR-		4
	Exit		5
	Up		6
	Menu		7
	Left/Zoom-		8
	OK		9
	Right/Zoom+		AV
	Down		SP/LP
	Text		<<
	Red/[o]		Play
	Green/Timer/List		>>
			Yellow / YouTube / Repeat
			Info / Angle
			Blue / Prime Video / Random
			1
			2
			3
			4
			5
			6
			7
			8
			9
			AV / Input / RDS
			Setup / OPT /
			<< / Tune-
			Play / Slow
			>> / Tune+





Original	Rechange
Power	Power
Vol+	Vol+
PR+	CH+ / Page+
Vol-	Vol-
Mute	Mute / Dimmer
Back	Back / Return
PR-	CH- / Page-
Exit	Exit / Cancel / Clear
Up	Up
Menu	Menu / Home
Left/Zoom-	Left
OK	OK
Right/Zoom+	Right
Down	Down
Text	Text / Goto
Red/[o]	Red / Netflix / Search
Green/Timer/List	Green / APP / Repeat

Original	Rechange
Yellow	Yellow / YouTube / Repeat
Info	Info / Angle
Blue/[]	Blue / Prime Video / Random
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
AV	AV / Input / RDS
SP/LP	Setup / OPT /
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+





Original	Rechange	Original	Rechange
Power	Power	Yellow	Yellow / YouTube / Repeat
Vol+	Vol+	Info	Info / Angle
PR+	CH+ / Page+	Blue/[]	Blue / Prime Video / Random
Vol-	Vol-	1	1
Mute	Mute / Dimmer	2	2
Back	Back / Return	3	3
PR-	CH- / Page-	4	4
Exit	Exit / Cancel / Clear	5	5
Up	Up	6	6
Menu	Menu / Home	7	7
Left/Zoom-	Left	8	8
OK	OK	9	9
Right/Zoom+	Right	AV	AV / Input / RDS
Down	Down	0 / - / --	0
Text	Text / Goto	SP/LP	Setup / OPT /
Red/[o]	Red / Netflix / Search	<<	<< / Tune-
Green/Timer/List	Green / APP / Repeat	Play	Play / Slow



