



Original	Recharge
 Power	 Power
 Green / Prog.	 Green / APP / Repeat
 Green / Prog.	 TV/Radio /
 Yellow / Status	 Yellow / YouTube / Repeat
 Yellow / Status	 Info / Angle
 Blue / Guide	 Blue / Prime Video / Random
 Blue / Guide	 Guide / EPG / -/--
 Red / Dec.	 Red / Netflix / Search
 Up	 Up
 Purple / Text	 Display / Media
 Purple / Text	 Text / Goto
 Exit	 Exit / Cancel / Clear
 Left / I<<	 Left
 Left / I<<	 I<< / Preset-
 OK	 OK
 Right / >>I	 Right
 Right / >>I	 >>I / Preset+

Original	Recharge
 Menu	 Menu / Home
 Vol+	 Vol+
 Down	 Down
 PR+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 PR-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 Index / Mark	 Fav / Marker / PC
 4	 4
 5	 5
 6	 6
 0000	 Shift + Exit / Cancel / Clear
 7	 7
 8	 8





	Original	Recharge		Original	Recharge
	9		9		
	SP / LP		Smart / List		
	AV		AV / Input / RDS		
	0 / --		0		
	<< REW.		<< / Tune-		
	Play		Play / Slow		
	>> F.FWD		>> / Tune+		
	Rec.		Rec / Rec Mode		
	Stop		Stop / Hold		
	Pause		Pause / Step / Freeze		

	Original	Recharge





Original	Rechange
 Power	 Power
 Green / Prog.	 Green / APP / Repeat
 Green / Prog.	 TV/Radio /
 Yellow / Status	 Info / Angle
 Yellow / Status	 Yellow / YouTube / Repeat
 Blue / Guide	 Blue / Prime Video / Random
 Blue / Guide	 Guide / EPG / -/--
 Red / Dec.	 Red / Netflix / Search
 Up	 Up
 Purple / Text	 Display / Media
 Purple / Text	 Text / Goto
 Exit	 Exit / Cancel / Clear
 Left / I<<	 I<< / Preset-
 Left / I<<	 Left
 OK	 OK
 Right / >>I	 Right
 Right / >>I	 >>I / Preset+

Original	Rechange
 Menu	 Menu / Home
 Vol+	 Vol+
 Down	 Down
 PR+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 PR-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 Index / Mark	 Fav / Marker / PC
 4	 4
 5	 5
 6	 6
 0000	 Shift + Exit / Cancel / Clear
 7	 7
 8	 8





	Original	Recharge	Original	Recharge
	9	 9		
	SP / LP	 Smart / List		
	AV	 AV / Input / RDS		
	0 / --	 0		
	<< REW.	 << / Tune-		
	Play	 Play / Slow		
	>> F.FWD	 >> / Tune+		
	Rec	 Rec / Rec Mode		
	Stop	 Stop / Hold		
	Pause	 Pause / Step / Freeze		

