



| Original | Rechange |
|----------|--------------------|
| Power | Power |
| Mute | Mute / Dimmer |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| Info | Info / Angle |
| 0 | 0 |
| Recall | Back / Return |
| PMode | Picture / Format |
| I / II | Audio / Lang I/II |
| EPG | Guide / EPG / -/-- |

| Original | Rechange |
|-----------|-------------------------------|
| Sleep | Sleep / Timer |
| Input | AV / Input / RDS |
| Up | Up |
| Left | Left |
| OK | OK |
| Right | Right |
| Down | Down |
| Menu | Menu / Home |
| Exit | Exit / Cancel / Clear |
| FAV | Fav / Marker / PC |
| Vol + | Vol+ |
| ADD / DEL | Shift + Back / Return |
| PR + | CH+ / Page+ |
| Vol - | Vol- |
| Cancel | Shift + Exit / Cancel / Clear |
| PR - | CH- / Page- |
| Red | Red / Netflix / Search |





| Original | Recharge |
|---------------|-----------------------------|
| Green | Green / APP / Repeat |
| Yellow | Yellow / YouTube / Repeat |
| Blue | Blue / Prime Video / Random |
| Play / Pause | Play / Slow |
| Play / Pause | Shift + Play / |
| Stop | Stop / Hold |
| Setup | Setup / OPT / |
| Eject | Eject / Surround |
| I<< / Text | Shift + I<< / Preset- |
| I<< / Text | I<< / Preset- |
| << | << / Tune- |
| Size | Zoom / Size |
| S. Title M. | Sound / Title |
| >>I / Hold | >>I / Preset+ |
| >>I / Hold | Shift + >>I / Preset+ |
| >> / Reveal | >> / Tune+ |
| Subpage / Rec | Shift + Rec / Rec Mode |

| Original | Recharge |
|---------------|----------------|
| Subpage / Rec | Rec / Rec Mode |
| Index / List | Smart / List |

