 







 







 







 






 























	Original	Rechange		Original	Rechange
	 Power	 Power		 Shift + Guide / EPG / -/--	
	 Mute	 Mute / Dimmer		 Smart / List	
	 Source	 AV / Input / RDS		 Menu / Home	
	 P.Mode	 Picture / Format		 Info / Angle	
	 S.Mode	 Sound / Title		 Sleep / Timer	
	 I/II/Audio	 Audio / Lang I/II		 Exit / Cancel / Clear	
	 P.Size	 Zoom / Size		 Up	
	 1	 1		 Left	
	 2	 2		 Enter / OK	
	 3	 3		 Right	
	 4	 4		 Down	
	 5	 5		 Vol+	
	 6	 6		 Vol-	
	 7	 7		 CH- / Page-	
	 8	 8		 CH+ / Page+	
	 9	 9		 Red / D.Setup	
	 0	 0		 Red / D.Setup	



