



| Original  |        | Rechange  |                            | Original  |          | Rechange  |                          |
|---|--------|---|----------------------------|---|----------|---|--------------------------|
|    | Power  |    | Power                      |    | Vol+     |    | Vol+                     |
|    | Mute   |    | Mute / Dimmer              |    | MTS I/II |    | Audio / Lang I/II        |
|    | 1      |    | 1                          |    | CH+      |    | CH+ / Page+              |
|    | 2      |    | 2                          |    | Vol-     |    | Vol-                     |
|    | 3      |    | 3                          |    | Sub-T    |    | Subtitle / EQ            |
|    | 4      |    | 4                          |    | CH-      |    | CH- / Page-              |
|    | 5      |    | 5                          |    | Aspect   |    | Shift + Picture / Format |
|    | 6      |    | 6                          |    | Freeze   |    | Shift + Pause / Step     |
|    | 7      |    | 7                          |    | Sleep    |    | Sleep / Timer            |
|   | 8      |   | 8                          |   | Source   |   | AV / Input / RDS         |
|  | 9      |  | 9                          |  | Up       |  | Up                       |
|  | -/--   |  | Shift + Guide / EPG / -/-- |  | Display  |  | Display / Media          |
|  | 0      |  | 0                          |  | Left     |  | Left                     |
|  | Recall |  | Back / Return              |  | OK       |  | OK                       |
|  | P.Mode |  | Picture / Format           |  | Right    |  | Right                    |
|  | S.Mode |  | Sound / Title              |  | Menu     |  | Menu / Home              |
|  | FAV    |  | Fav / Marker / PC          |  | Down     |  | Down                     |



