 

 

 

 

 

 

 







 



 



 



 

 

 

 



 

 

 







 

 



 



 

 
 




Original		Rechange		Original		Rechange	
	Power		Power		Recall		Fav / Marker / PC
	Source		AV / Input / RDS		[i+]		Info / Angle
	TV		Shift + 1		AD		Sound / Title
	[<>]		Picture / Format		Vol+		Vol+
	3D		Shift + 3		Vol-		Vol-
	O)I/II		Audio / Lang I/II		Mute		Mute / Dimmer
	Subtitle		Subtitle / EQ		P+		CH+ / Page+
	1		1		P-		CH- / Page-
	2		2		Text		Text / Goto
	3		3		Quick		Display / Media
	4		4		List		Smart / List
	5		5		Menu		Menu / Home
	6		6		Guide		Guide / EPG / -/-
	7		7		[.]		D.Menu / Top
	8		8		[>]		Setup / OPT /
	9		9		Exit		Exit / Cancel / Clear
	0		0		Up		Up



