

 


 


 

 

 








 



























Original		Rechange		Original		Rechange	
	Power		Power		P +		CH+ / Page+
	1		1		P -		CH- / Page-
	2		2		Menu / DVD		Menu / Home
	3		3		Exit / Back		Exit / Cancel / Clear
	4		4		Up		Up
	5		5		Down		Down
	6		6		Left		Left
	7		7		Right		Right
	8		8		OK		OK
	9		9		Guide / Top Menu		D.Menu / Top
	0		0		Guide / Top Menu		Shift + D.Menu / Top Menu
	DVD RTN		Shift + 2		TV Fav/Radio / Setup		TV/Radio /
	Input		AV / Input / RDS		TV Fav/Radio / Setup		Shift + TV/Radio / Program
	Audio A/D		Audio / Lang I/II		Red		Red / Netflix / Search
	Mute		Mute / Dimmer		Green		Green / APP / Repeat
	Vol +		Vol+		Yellow		Yellow / YouTube / Repeat
	Vol -		Vol-		Blue		Blue / Prime Video / Random









 



 



 















 



 



 













 



 

 











Original	Recharge	Original	Recharge
Video Format	Shift + 4		
Aspect	Picture / Format		
Index i+	Info / Angle		
Text / Mix	Text / Goto		
Open/Close / Subtitle	Eject / Surround		
Open/Close / Subtitle	Shift + Eject / Surround		
Stop / Dual I/II	Stop / Hold		
Stop / Dual I/II	Shift + Stop /		
Play	Play / Slow		
Pause / Step / [V]	Pause / Step / Freeze		
I<< / Reveal	I<< / Preset-		
<< / Hold	Shift + << /		
<< / Hold	<< / Tune-		
>> / Size	Shift + >> /		
>> / Size	>> / Tune+		
>>I / Cancel	Shift + >>I / Preset+		
>>I / Cancel	>>I / Preset+		









Original		Rechange		Original		Rechange	
	Power		Power		Up		Up
	1		1		Left		Left
	2		2		OK		OK
	3		3		Right		Right
	4		4		Top Menu		D.Menu / Top
	5		5		Down		Down
	6		6		Set Up		Setup / OPT /
	7		7		[<>]		Picture / Format
	8		8		→ / ←		Display / Media
	9		9		[i+]/[≡i]		Info / Angle
	0		0		Text/Audio		Text / Goto
	Input		AV / Input / RDS		Open/Close/Subtit		Eject / Surround
	Vol+		Vol+		Stop/O)/II		Stop / Hold
	Vol-		Vol-		Play/[≡o]		Play / Slow
	Mute		Mute / Dimmer		Pause/Step/[▼]		Pause / Step / Freeze
	Menu/DVD		Menu / Home		I<</[≡?]		I<< / Preset-
	Exit / Back		Exit / Cancel / Clear		<</[≡+]		<< / Tune-





Original	Recharge	Original	Recharge
 >>/[♦]	 >> / Tune+		
 >>I/[O]/[≡x]	 >>I / Preset+		

