











 
 
 
 




 

 

 






Original		Recharge		Original		Recharge	
	Power		Power		Vol-		Vol-
	1		1		P+		CH+ / Page+
	2		2		P-		CH- / Page-
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		OK		OK
	8		8		[G]		Guide / EPG / -/--
	9		9		i		Info / Angle
	0		0		←		Back / Return
	Lang		Audio / Lang I/II		Exit		Exit / Cancel / Clear
	[=].		Subtitle / EQ		Menu		Menu / Home
	Mute		Mute / Dimmer		Source		AV / Input / RDS
	Home		Shift + Menu /		Text		Text / Goto
	Smart		Smart / List		<<		<< / Tune-
	Vol+		Vol+		Stop		Stop / Hold





	Original	Recharge	Original	Recharge
	>>	 >> / Tune+		
	Rec	 Rec / Rec Mode		
	Pause	 Pause / Step / Freeze		
	Play	 Play / Slow		
	Red	 Red / Netflix / Search		
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		
	Netflix	  Shift + Red / Netflix /		
	YouTube	  Shift + Yellow / YouTube /		
	prime video	  Shift + Blue / Prime		
	Google Play	 Display / Media		

