



Original	Recharge
Power	Power
Input	AV / Input / RDS
Sleep	Sleep / Timer
TV	Shift + 1
Cable/Sat	Shift + 2
BD/DVD	Shift + 3
DVR/VCR	Shift + 4
Audio	Audio / Lang I/II
AUX	Shift + 7
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

Original	Recharge
9	9
0	0
-	Shift + Guide / EPG / -/-
CH RTN	Fav / Marker / PC
Info	Info / Angle
Mute	Mute / Dimmer
Media Share	Display / Media
Vol+	Vol+
Vol-	Vol-
CH+	CH+ / Page+
CH-	CH- / Page-
Search	Shift + Green / APP /
Home	Menu / Home
World	Smart / List
Quick	TV/Radio /
Guide	Guide / EPG / -/-
Back	Back / Return





Original	Recharge
Exit	Exit / Cancel / Clear
↑	+  Shift + Up
Up	Up
↓	+  Shift + Down
Down	Down
Left	Left
Right	Right
OK	OK
<<<	<<< / Tune-
<<<	+  Shift + <<< /
Play	Play / Slow
>>>	>>> / Tune+
>>>	+  Shift + >>> /
I<<<	I<<< / Preset-
Stop	Stop / Hold
Pause	Pause / Step / Freeze
>>>I	>>>I / Preset+

Original	Recharge
Netflix	+  Shift + Red / Netflix /
eManual	Zoom / Size
Rec	Rec / Rec Mode
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Pic Size	+  Shift + Zoom /
Pic Mode	Picture / Format
Setup	Setup / OPT /
MTS	+  Shift + Subtitle / EQ
CC	Subtitle / EQ

