



Original	Rechange
Open/Close	Eject / Surround
Input Select	AV / Input / RDS
Standby	Power
1	1
2	2
3	3
Prog+	CH+ / Page+
4	4
5	5
6	6
Prog-	CH- / Page-
7	7
8	8
9	9
Timer Prog	Sleep / Timer
Setup	Setup / OPT /
0	0

Original	Rechange
Clear	Exit / Cancel / Clear
[i+]/Info	Info / Angle
Text	Text / Goto
Variable Replay	Vol+
Variable Skip	Vol-
Guide	Guide / EPG / -/--
Top Menu	D.Menu / Top
Up	Up
Disc Menu	Menu / Home
Left	Left
Enter / OK	OK
Right	Right
Display	Display / Media
Down	Down
Return	Back / Return
Red	Red / Netflix / Search
Green	Green / APP / Repeat





Original	Recharge
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+
I<<	I<< / Preset-
Stop	Stop / Hold
>>I	>>I / Preset+
Pause	Pause / Step / Freeze
HDD	Shift + 7
DVD	Shift + 2
Time Slip	TV/Radio /
Dubbing	Picture / Format
Rec Mode	Shift + Rec / Rec Mode
Rec	Rec / Rec Mode
Subtitle	Subtitle / EQ
AD	Sound / Title

Original	Recharge
O)/Audio	Audio / Lang I/II
Sat Link	Smart / List

