



Original	Rechange
	AV / Input / RDS
	Power
	Mute / Dimmer
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Audio / Lang I/II
	0
	Text / Goto
	Vol+
	Menu / Home

Original	Rechange
	CH+ / Page+
	Vol-
	CH- / Page-
	Info / Angle
	Up
	Guide / EPG / -/--
	Left
	OK
	Right
	Back / Return
	Down
	Exit / Cancel / Clear
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Shift + Blue / Prime Video / Random





Original		Recharge	
	Netflix	+	Shift + Red / Netflix /
	You Tube	+	Shift + Yellow / YouTube /
	twitch		Smart / List
	Rakuten Tv	+	Shift + Green / APP /
	*1		Setup / OPT /
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold

Original		Recharge	

