


Original		Rechange		Original		Rechange	
	Mute		Mute / Dimmer		ZAP		Smart / List
	Power		Power		Up / P+		Up
	Prog		TV/Radio /		Up / P+		CH+ / Page+
	I-II		Audio / Lang I/II		Right / Vol+		Right
	O to O		Sound / Title		Right / Vol+		Vol+
	PP		Back / Return		Left / Vol-		Left
	1		1		Left / Vol-		Vol-
	2		2		Normal		OK
	3		3		Down / P-		Down
	4		4		Down / P-		CH- / Page-
	5		5		Red / Memo		Red / Netflix / Search
	6		6		Green / Audio		Green / APP / Repeat
	7		7		Green / Audio		Shift + Audio / Lang I/II
	8		8		Yellow / Video		Yellow / YouTube / Repeat
	9		9		Blue / Extra		Blue / Prime Video / Random
	0		0		[ ]		Display / Media
	--		Guide / EPG / --		[ + ]		Stop / Hold

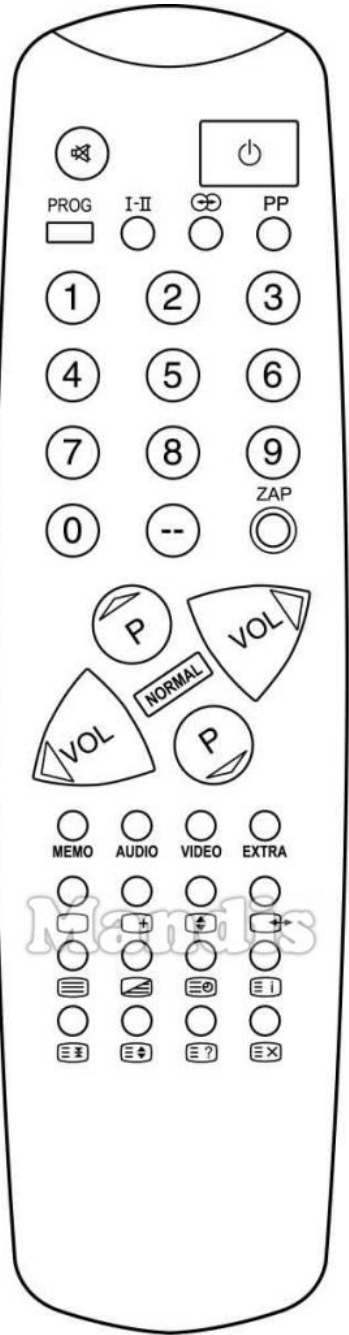



Original	Recharge
[ ◆ ]	<b>OPT-TOOLS</b> <b>SETUP</b> Setup / OPT /
[ ]↔	<b>TOP MENU</b> <b>D.MENU</b> D.Menu / Top
[ ≡ ]	<b>GOTO</b> <b>TEXT</b> Text / Goto
[ /≡ ]	<b>SHIFT</b> + <b>GOTO</b> Shift + <b>TEXT</b> Text /
[ ≡⊙ ]	<b>EQ</b> <b>SUBTITLE</b> Subtitle / EQ
[ ≡   ]	<b>ANGLE</b> <b>INFO</b> Info / Angle
[ ≡ □ ]	<b>STEP - FREEZE</b> <b>II</b> Pause / Step / Freeze
[ ≡ ◆ ]	<b>SIZE</b> <b>ZOOM</b> Zoom / Size
[ ≡ ? ]	<b>RDS</b> <b>AV INPUT</b> AV / Input / RDS
[ ≡ X ]	<b>CLEAR</b> <b>EXIT</b> Exit / Cancel / Clear

Original	Recharge

